E-Z ZIP Seal Kit
Installation Instructions

TOOLS NEEDED:

#2 Phillips Driver Bit
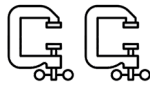
Drill

Tape Measure

Hack Saw

Scissors

Pencil

Clamps

Step 1: Lay your kit components out and make sure you have all the tools needed for installation.

Step 2: Remove any existing weather seal around the jamb of your garage door

Step 3: Measure the bottom of your garage door (Figure 1) of your garage door. Mark the measurement of the door width with your pencil or marker on the seal (Figure 2).
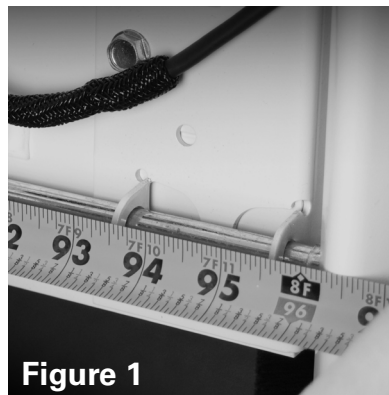
Step 4: If needed, cut the E-Z Zip seal. Using the hack saw, cut through the rigid PVC. Then use the scissors to trim the flexible end to make a straight cut. (Figures 3 and 4).
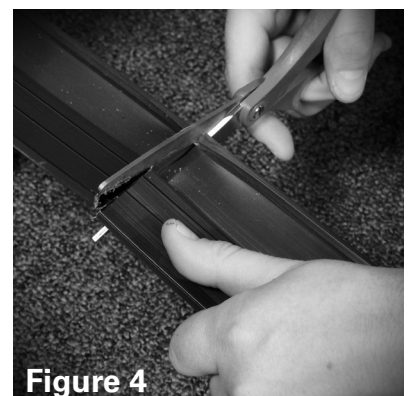
Step 5: Open the door to a height you're comfortable to work at. Using the included fasteners, take your drill and phillips drill bit and start installing screws about every 8 inches. Use the clamps or an extra set of hands to hold the seal against the bottom of the door. (Figure 5)

Step 6: Now that the rigid side is secured into place with our screws. We will install the bulb style seal by simply pushing the arrow into the plastic channel on the rigid side. Work your way along the entire bottom of the door until the whole seal is in place. (Figure 6)

Step 7: Close your garage door to test.

Figure 1

Figure 2

Figure 3

Figure 4

Figure 5

Figure 6